

**AsahiKASEI**  
ASAHI KASEI EMD

**AKD5357-B**  
**AK5357 Evaluation Board Rev.2**

**GENERAL DESCRIPTION**

AKD5357-B is an evaluation board for the digital audio 24bit 96kHz A/D converter, AK5357. AKD5357-B has analog input circuits and a digital interface transmitter, and can achieve the interface with digital audio systems via opt-connector.

■ **Ordering guide**

AKD5357-B --- AK5357 Evaluation Board

**FUNCTION**

- **DIT (AK4114) with optical output**

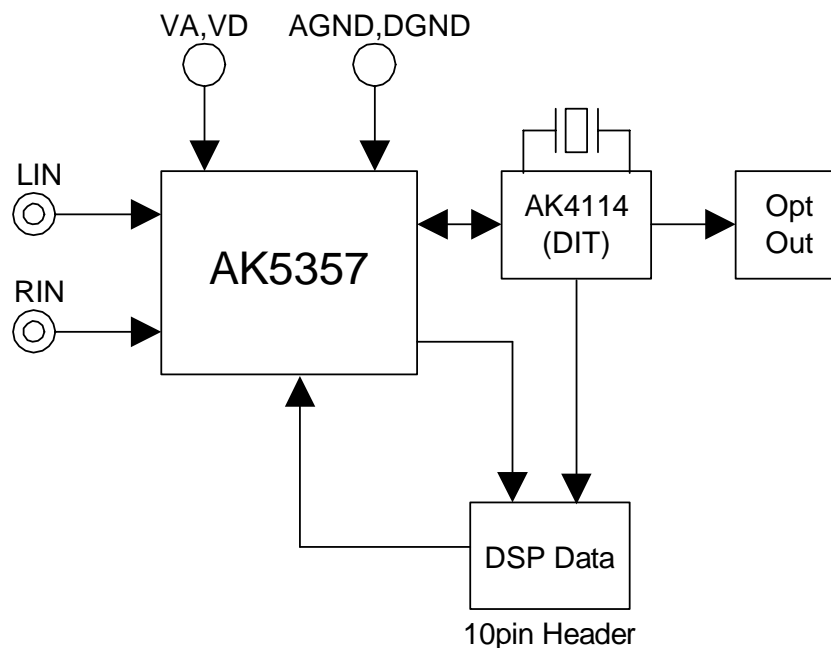


Figure 1. AKD5357-B Block Diagram

\* Circuit diagram and PCB layout are attached at the end of this manual.

## 1. Evaluation Board Manual

### ■ Operation sequence

#### 1) Set up the power supply lines.

[VA]	(red)	= 2.7 ~ 5.5V or +15V	: for VA of AK5357 (typ. 5.0V)
[VD]	(orange)	= 2.7 ~ 5.5V	: for VD of AK5357, 74HC14 (typ. 5.0V)
[VCC]	(red)	= 3.3V	: for AK4114
[AGND]	(black)	= 0V	: for analog ground
[DGND]	(black)	= 0V	: for logic ground

Each supply line should be distributed from the power supply unit.

#### 2) Set up the evaluation mode, jumper pins and DIP switches. (See the followings.)

#### 3) Power on.

The AK5357 and AK4114 should be reset once bringing SW2 = "L" upon power-up.

### ■ Evaluation mode

#### (1) Slave Mode

##### (1-1) A/D evaluation using DIT function of AK4114

PORT2 (DIT) is used. DIT generates audio bi-phase signal from received data and which is output through optical connector (TOTX141). It is possible to connect AKM's D/A converter evaluation boards on the digital-amplifier, which equips DIR input. Nothing should be connected to PORT1 (DSP).

JP5  
MCLK



##### (1-2) All interface signals including master clock are fed externally.

PORT1 (DSP) is used. All interface signals (MCLK, SCLK, LRCK) are provided to the AK5357 through PORT1. JP5 (MCLK) should be open. The DIF1 of SW1 (MODE) should be set to "H".


JP5  
MCLK



## (2) Master Mode


## (2-1) A/D evaluation using DIT function of AK4114

 PORT2 (DIT) is used. DIT generates audio bi-phase signal from received data and which is output through optical connector (TOTX141). It is possible to connect AKM's D/A converter evaluation boards on the digital-amplifier, which equips DIR input. Nothing should be connected to PORT1 (DSP). The DIF1 of SW1 (MODE) should be set to "H".



## (2-2) Master clock is fed externally.

 PORT1 (DSP) is used. MCLK is provided to the AK5357 through PORT1. JP5 (MCLK) should be open. The DIF1 of SW1 (MODE) should be set to "H".



### ■ Other jumper pins set up

1. JP1 (GND) : Analog ground and Digital ground  
 OPEN : Separated.  
 SHORT : Common. (The connector "DGND" can be open.) <Default>
2. JP2 (CKS1) : Setting of CKS1 pin for AK5357  
 H : Master mode  
 L : Slave mode <Default>
3. JP3 (VA) : Select VA for AK5357  
 VA : Supply from VA connector <Default>  
 REG : Supply from regulator. VA connector should be supplied +15V.
4. JP4 (VD) : Select VD for AK5357  
 VA : Supply from VA connector  
 VD : Supply from VD connector <Default>

## ■ DIP Switch set up

[SW1] (MODE1): Setting the evaluation mode for AK5357 and AK4114  
ON is “H”, OFF is “L”. CKS1 should be set by JP2.

No.	Name	OFF (“L”)	ON (“H”)
1	CKS0	See Table 2	
2	CKS2		
3	DIF	MSB justified	I <sup>2</sup> S Compatible
4	DIF1	AK4114 Master mode	AK4114 Slave mode

Table 1. Mode Setting

CKS2	CKS1	CKS0	Input Level	HPF	Master/Slave	MCLK	SCLK	
L	L	L	CMOS	ON	Slave	256/384/512/768fs	≥ 48fs or 32fs	
L	L	H	CMOS	OFF	Slave	256/384/512/768fs	≥ 48fs or 32fs	
L	H	L	CMOS	ON	Master	256fs (~ 96kHz)	64fs	
L	H	H	CMOS	ON	Master	512fs (~ 48kHz)	64fs	
H	L	L	TTL	ON	Slave	256/384/512/768fs	≥ 48fs or 32fs	
H	L	H	Reserved					
H	H	L	CMOS	ON	Master	384fs (~ 96kHz)	64fs	
H	H	H	CMOS	ON	Master	768fs (~ 48kHz)	64fs	

Table 2. Mode Setting of AK5357

Note: AK4114 does not support MCLK=384fs/512fs/768fs.  
PORT1 (DSP) should be used when MCLK=384fs/512fs/768fs.

## ■ The function of the toggle SW

Upper-side is “H” and lower-side is “L”.

[SW2] (PDN): Resets the AK5357 and AK4114. Keep “H” during normal operation.

## ■ Analog Input Circuits

Analog signal is input via J1(RIN) and J2(LIN) of RCA connectors.

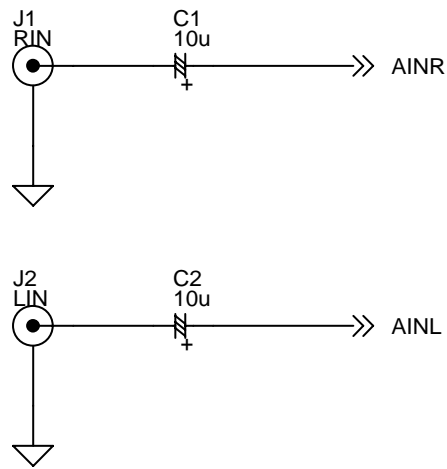


Figure 2. Analog Input circuits

\* AKM assumes no responsibility for the trouble when using the circuit examples.

<b>MEASUREMENT RESULTS</b>
----------------------------

[Measurement condition]

- Measurement unit: Audio Precision, System Two Cascade
- MCLK : 256fs
- SCLK : 64fs
- fs : 48kHz, 96kHz
- Bit : 24bit
- Power Supply : VA = VD = 5.0V (Using regulator)
- Interface : DIT
- Temperature : Room

Parameter		Result (Lch / Rch)	Unit
ADC Analog Input Characteristics:			
S/(N+D) (-1dB Input)	fs=48kHz	89.0 / 88.4	dB
	fs=96kHz	86.9 / 86.2	dB
D-Range (-60dB Input)	fs=48kHz, A-weighted	102.7 / 102.4	dB
	fs=96kHz	99.2 / 99.2	dB
S/N	fs=48kHz, A-weighted	102.8 / 102.8	dB
	fs=96kHz	99.4 / 99.4	dB
Interchannel Isolation		123.6 / 123.8	dB

[ADC Plot : fs=48kHz]

AKM

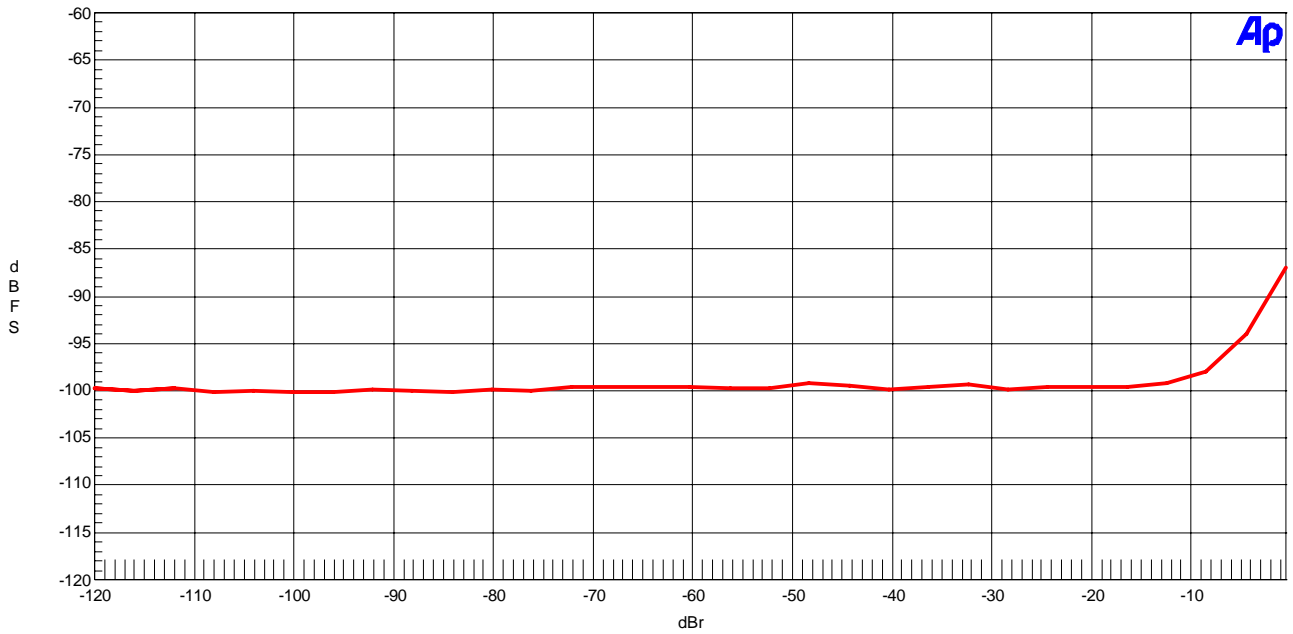
AK5357 THD+N vs. Input Level  
VA=VD=5.0V, fs=48kHz, fin=1kHz

Figure 1. THD+N vs. Input Level

AKM

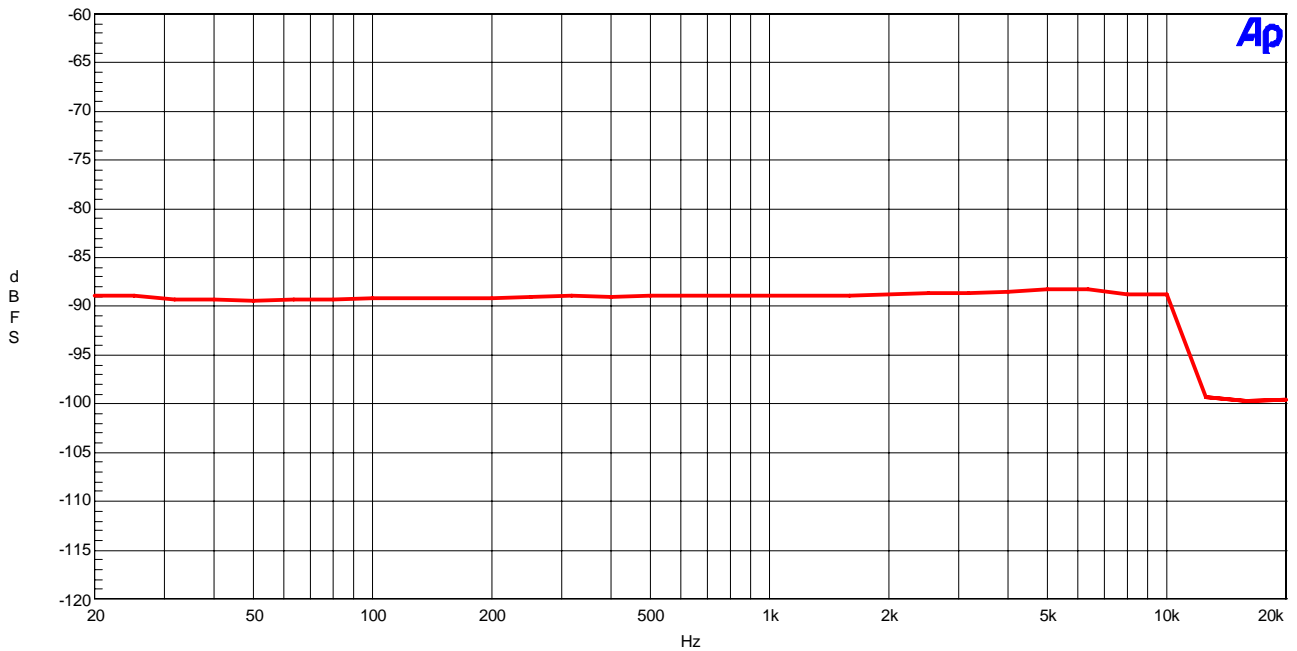
AK5357 THD+N vs. Input Frequency  
VA=VD=5.0V, fs=48kHz, Input=-1dBr

Figure 2. THD+N vs. Input Frequency

AKM

AK5357 Linearity  
 VA=VD=5.0V, fs=48kHz, fin=1kHz

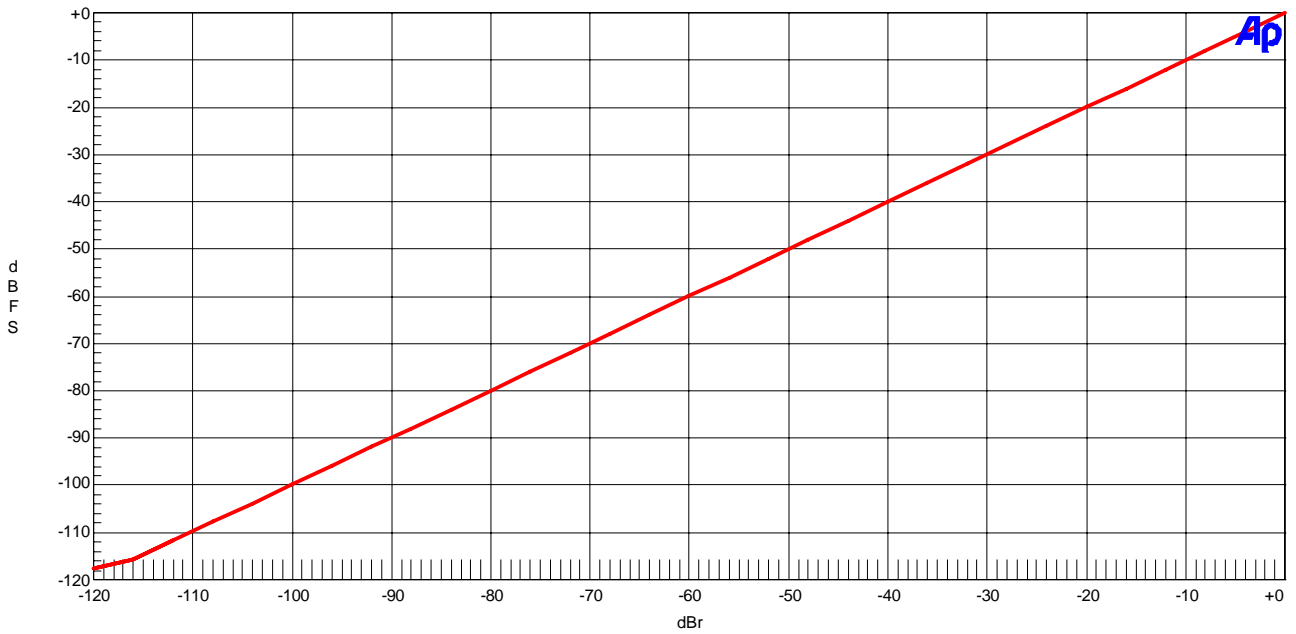


Figure 3. Linearity

AKM

AK5357 Frequency Response  
 VA=VD=5.0V, fs=48kHz, Input=-1dBr

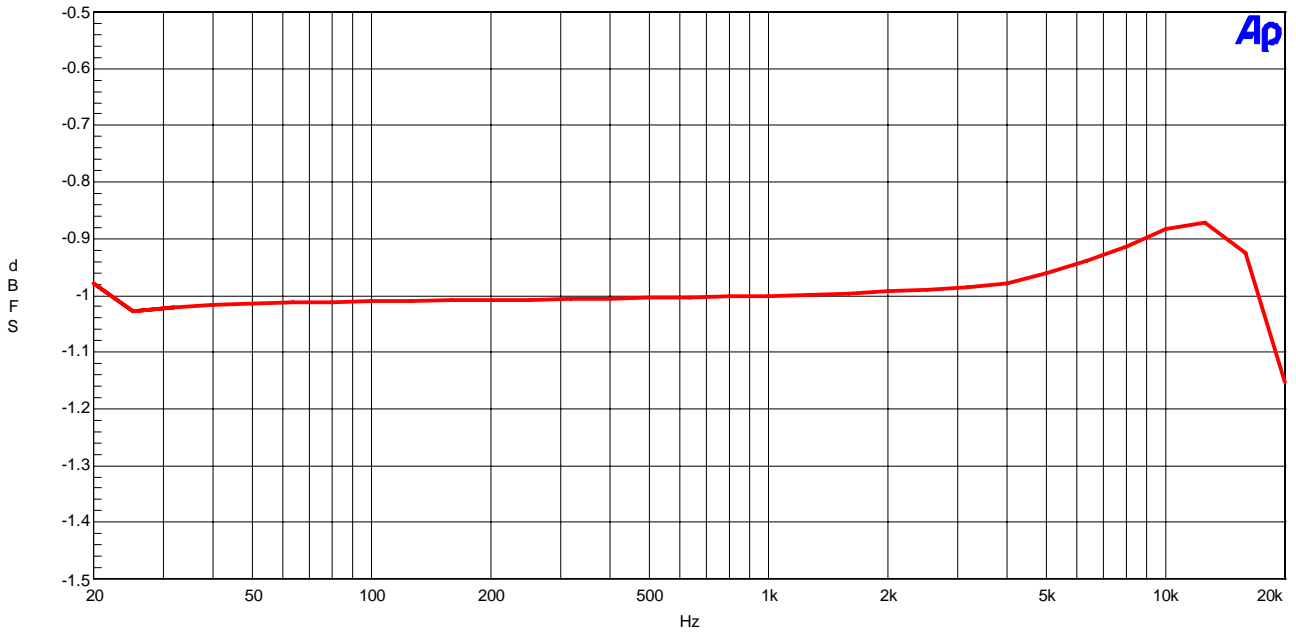


Figure 4. Frequency Response



AKM

AK5357 Crosstalk  
 VA=VD=5.0V, fs=48kHz, Input=-1dB<sub>r</sub>

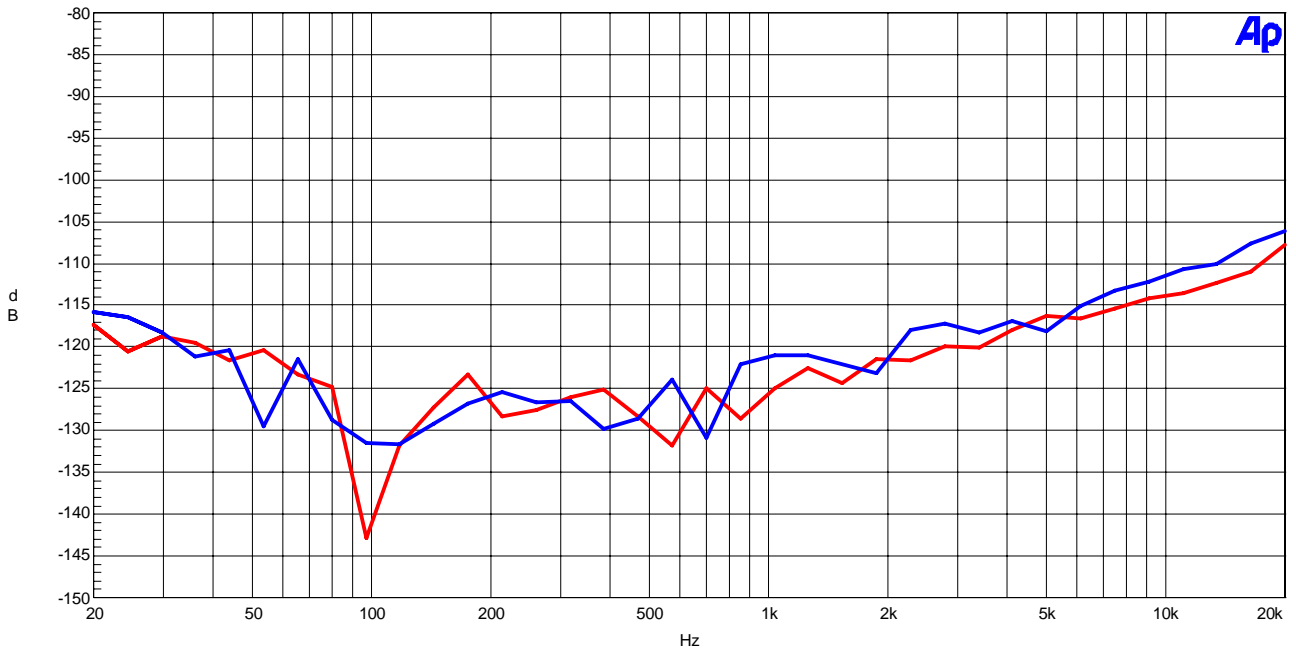


Figure 5. Crosstalk

AKM

AK5357 FFT PLOt  
 VA=VD=5.0V, fs=48kHz, Input=-1dB<sub>r</sub>, fin=1kHz

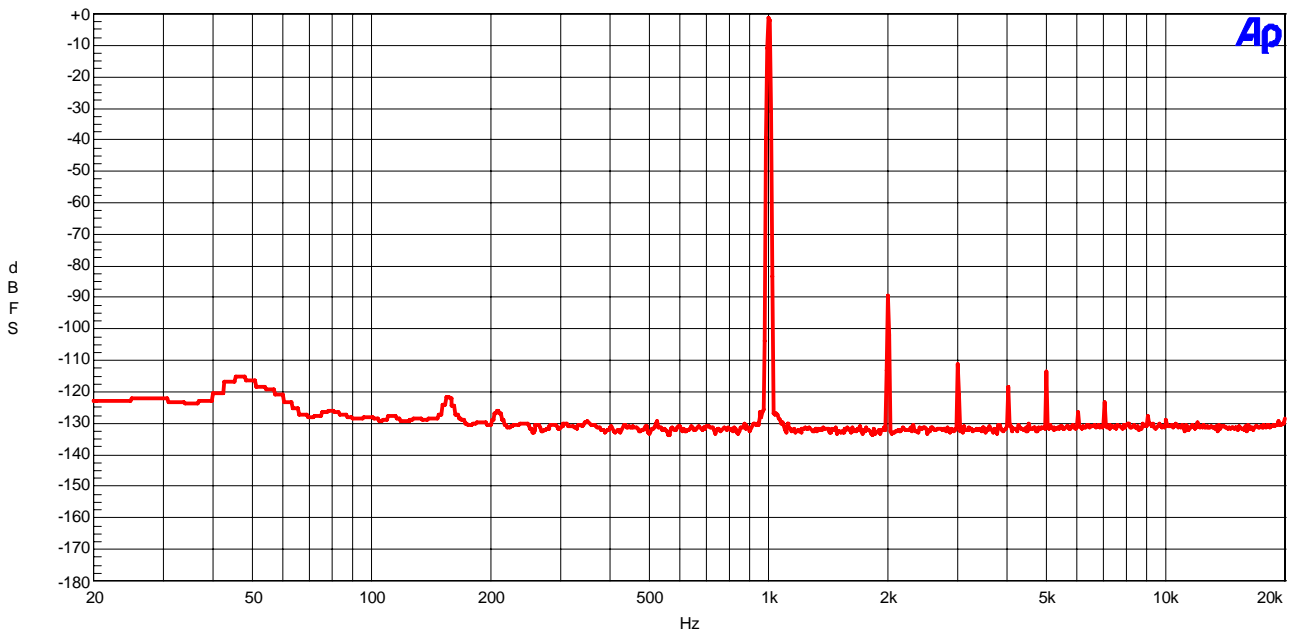


Figure 6. FFT Plot

AKM

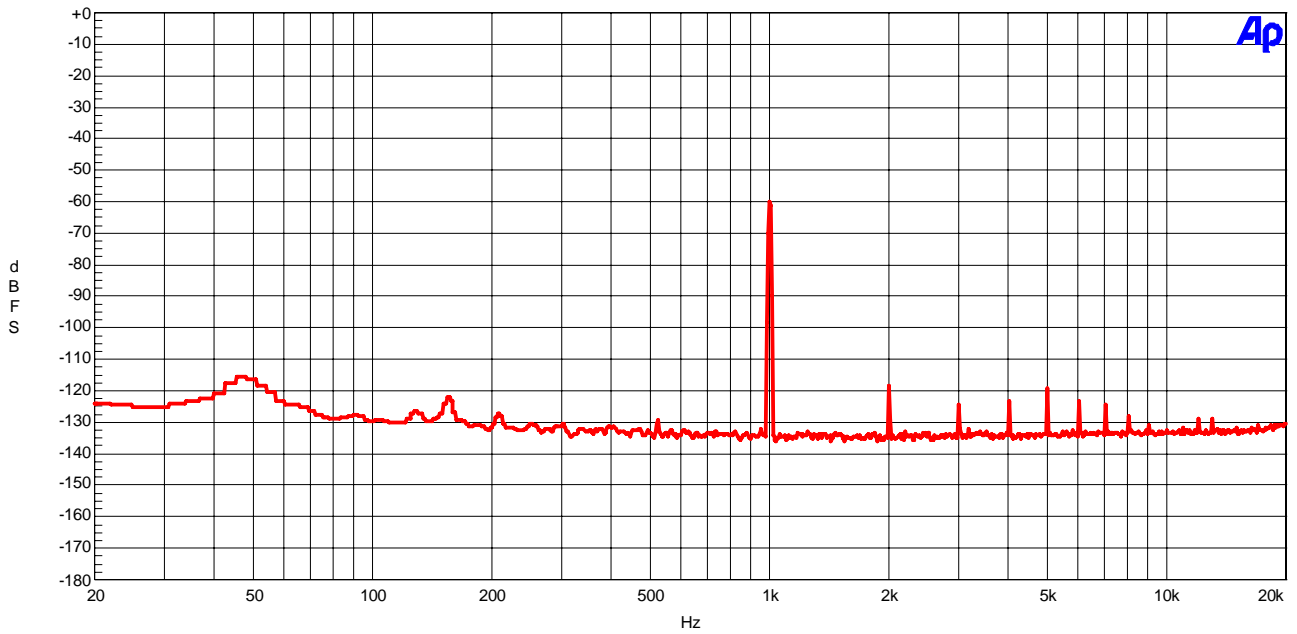
AK5357 FFT PLOt  
VA=VD=5.0V, fs=48kHz, Input=-60dB, fin=1kHz

Figure 7. FFT Plot

AKM


AK5357 FFT PLOt  
VA=VD=5.0V, fs=48kHz, fin=None

Figure 8. FFT Plot

[ADC Plot : fs=96kHz]

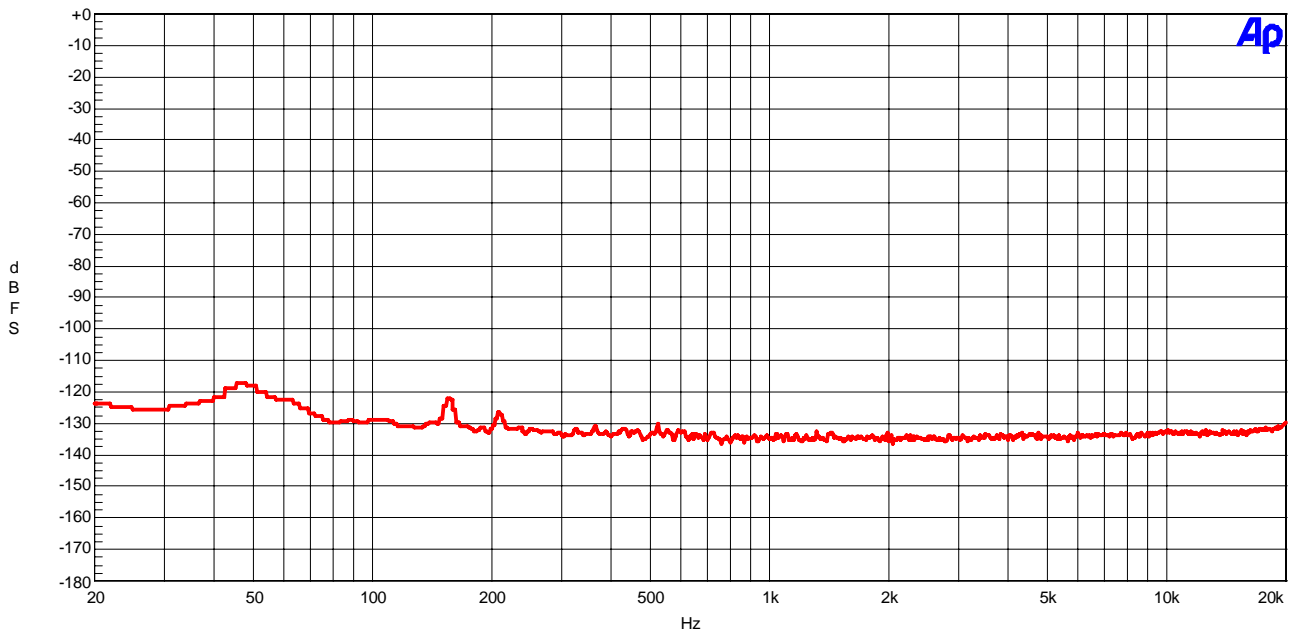AKM

AK5357 THD+N vs. Input Level  
VA=VD=5.0V, fs=96kHz, fin=1kHz

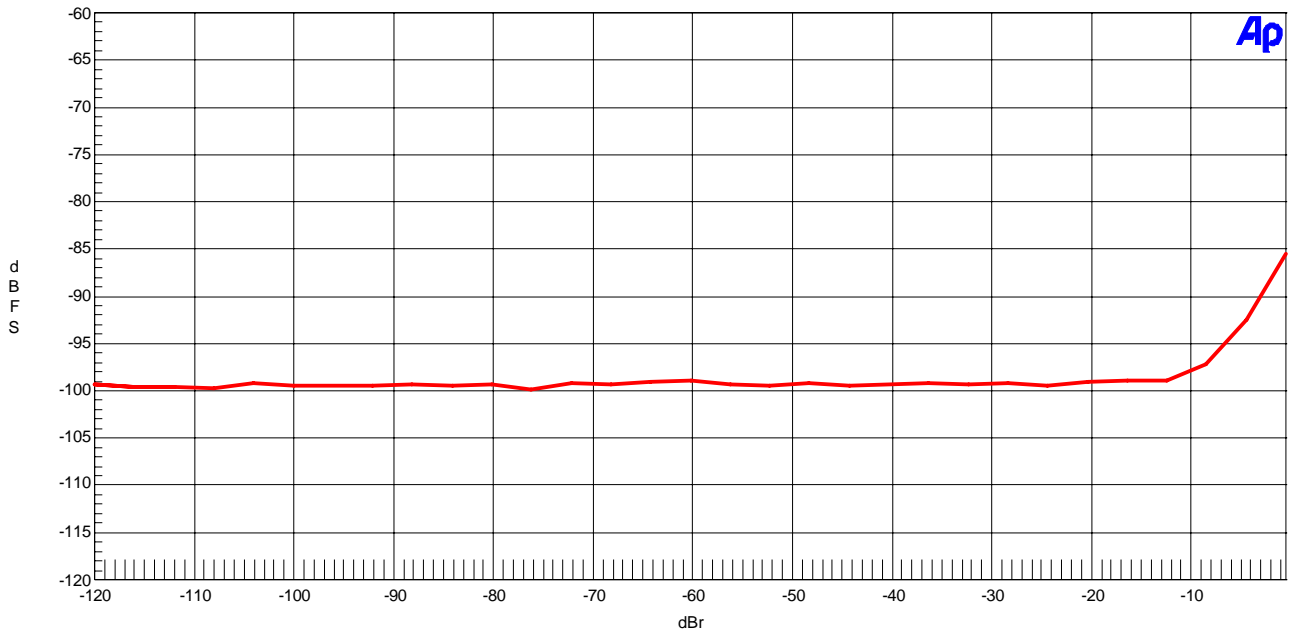


Figure 9. THD+N vs. Input Level

AKM

AK5357 THD+N vs. Input Frequency  
VA=VD=5.0V, fs=96kHz, Input=-1dBr

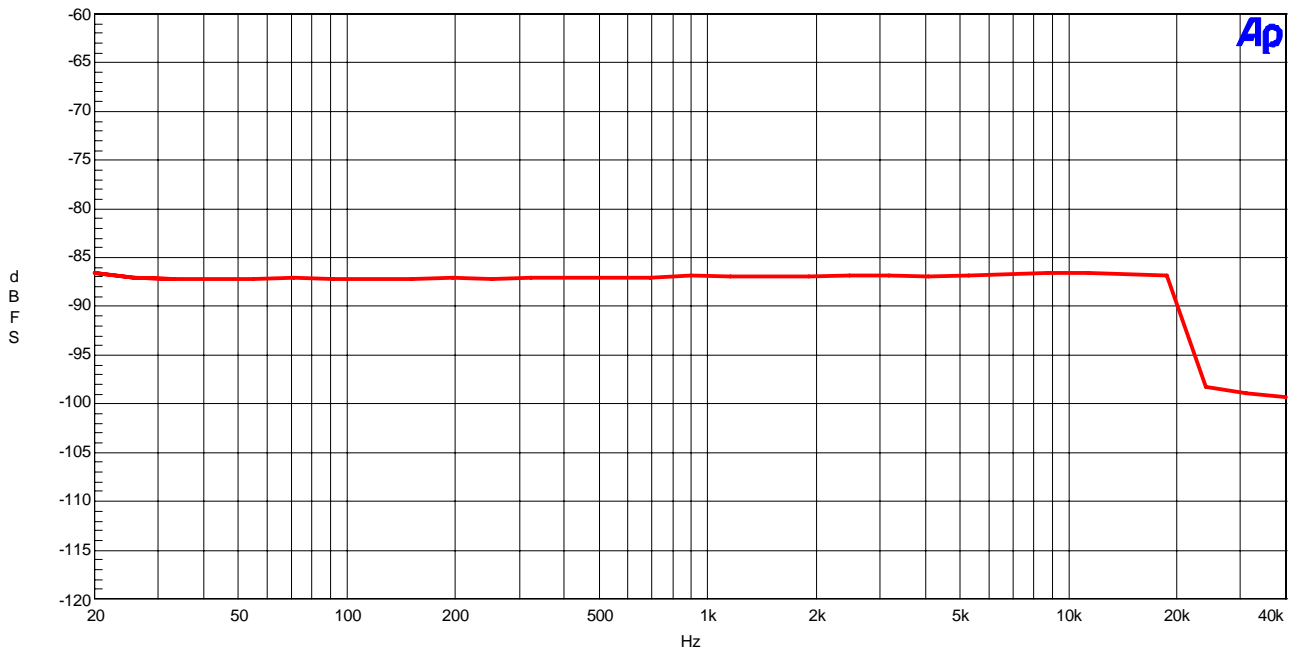


Figure 10. THD+N vs. Input Frequency

AKM

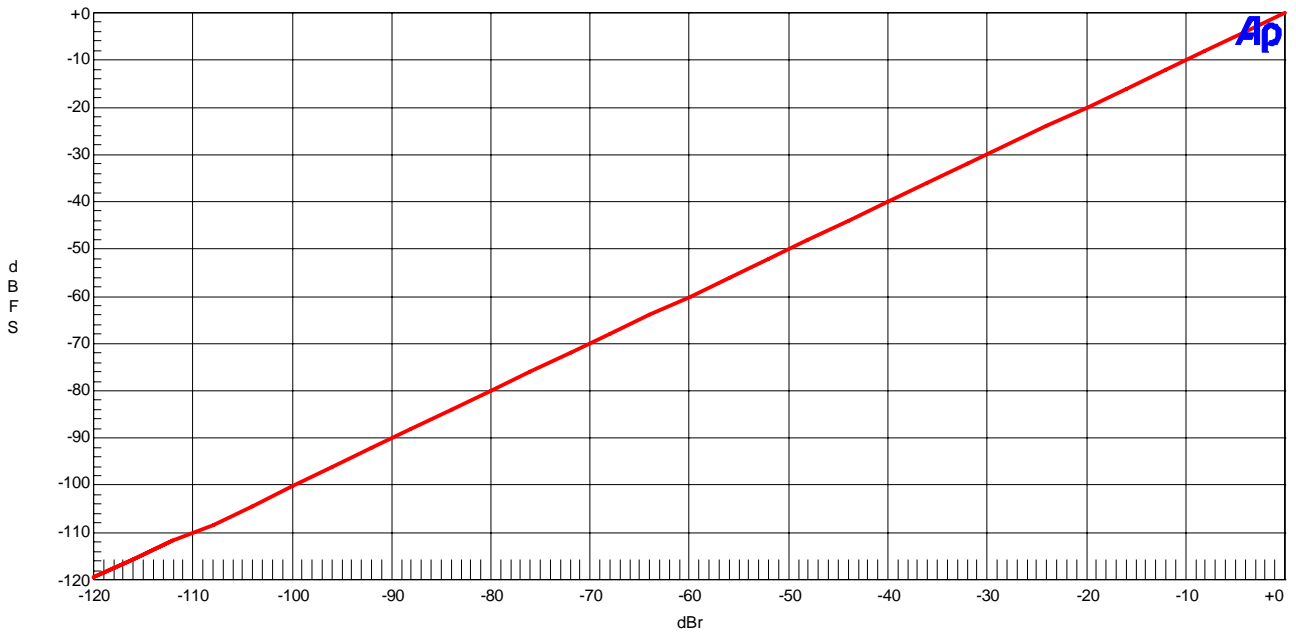
AK5357 Linearity  
VA=VD=5.0V, fs=96kHz, fin=1kHz

Figure 11. Linearity

AKM

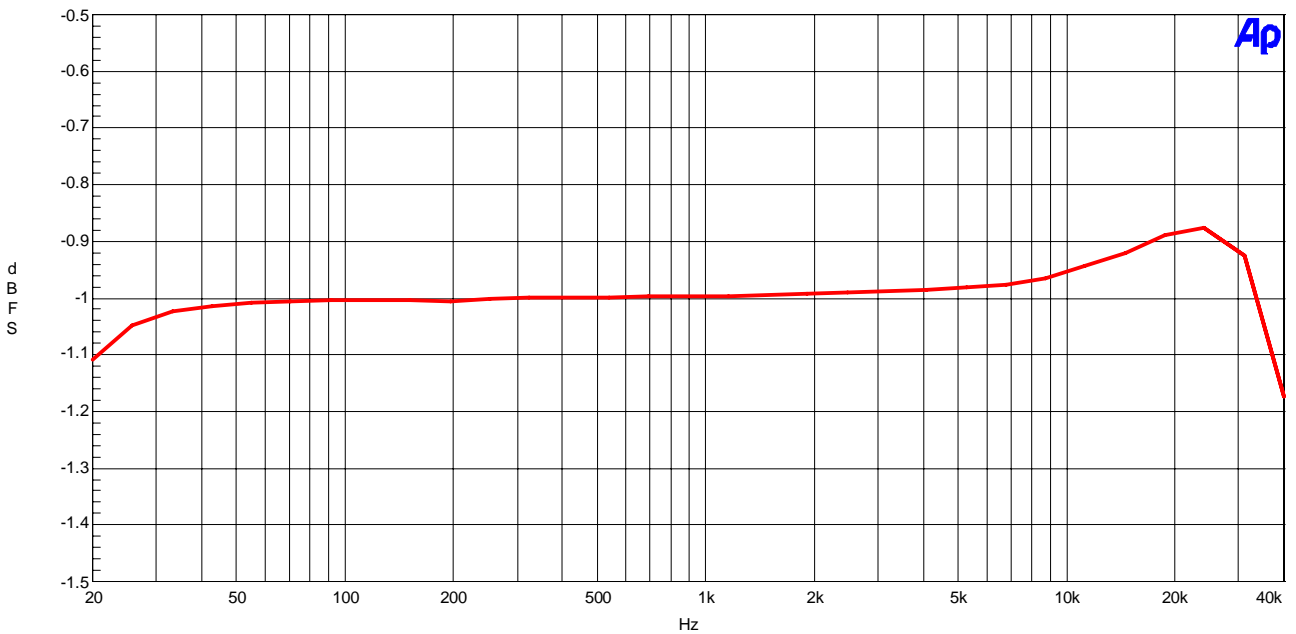
AK5357 Frequency Response  
VA=VD=5.0V, fs=96kHz, Input=-1dBr

Figure 12. Frequency Response

AKM

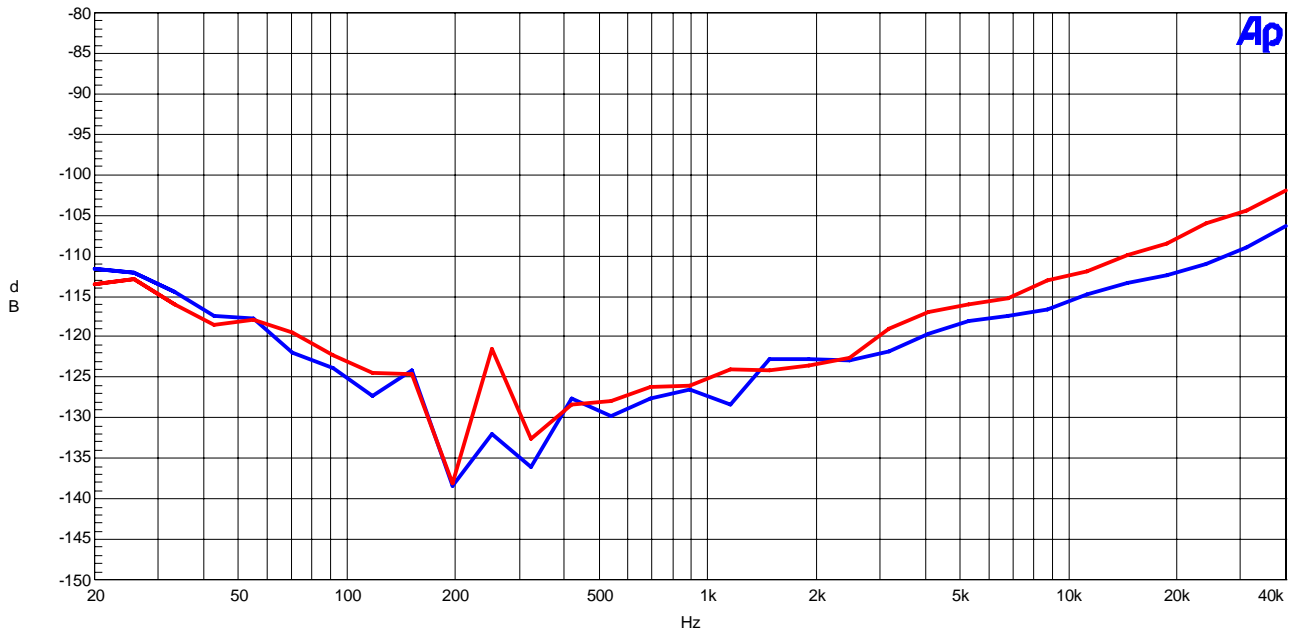
AK5357 Crosstalk  
VA=VD=5.0V, fs=96kHz, Input=-1dB

Figure 13. Crosstalk

AKM

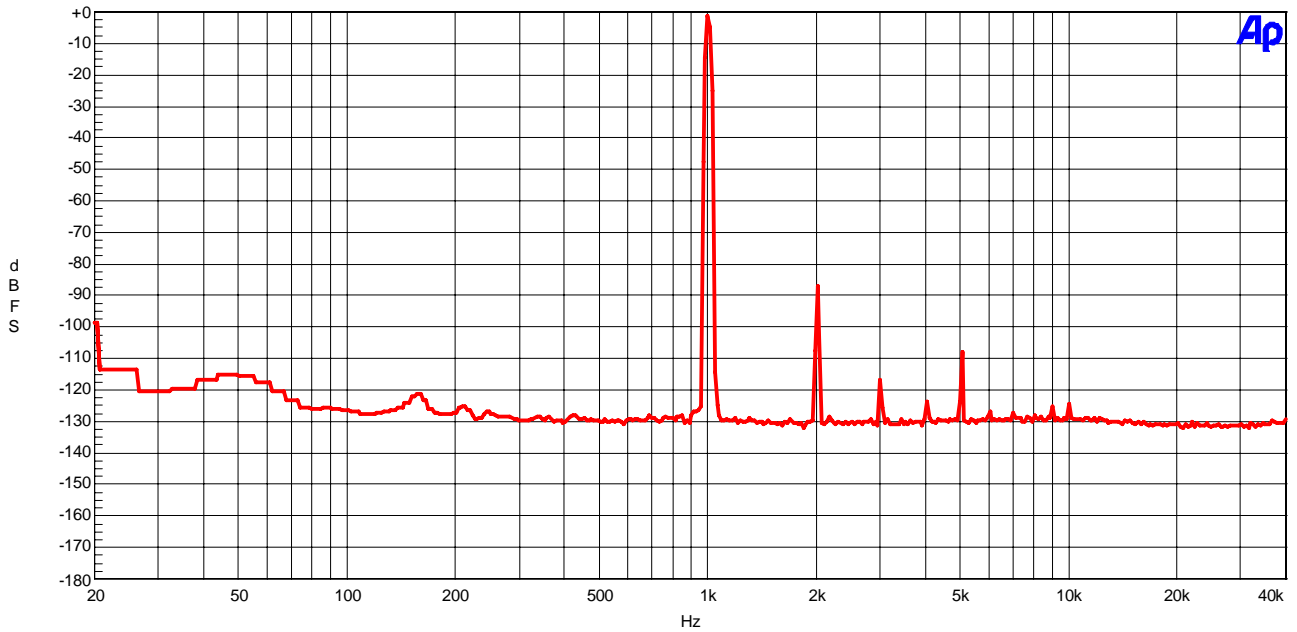
AK5357 FFT PLOt  
VA=VD=5.0V, fs=96kHz, Input=-1dB, fin=1kHz

Figure 14. FFT Plot

AKM

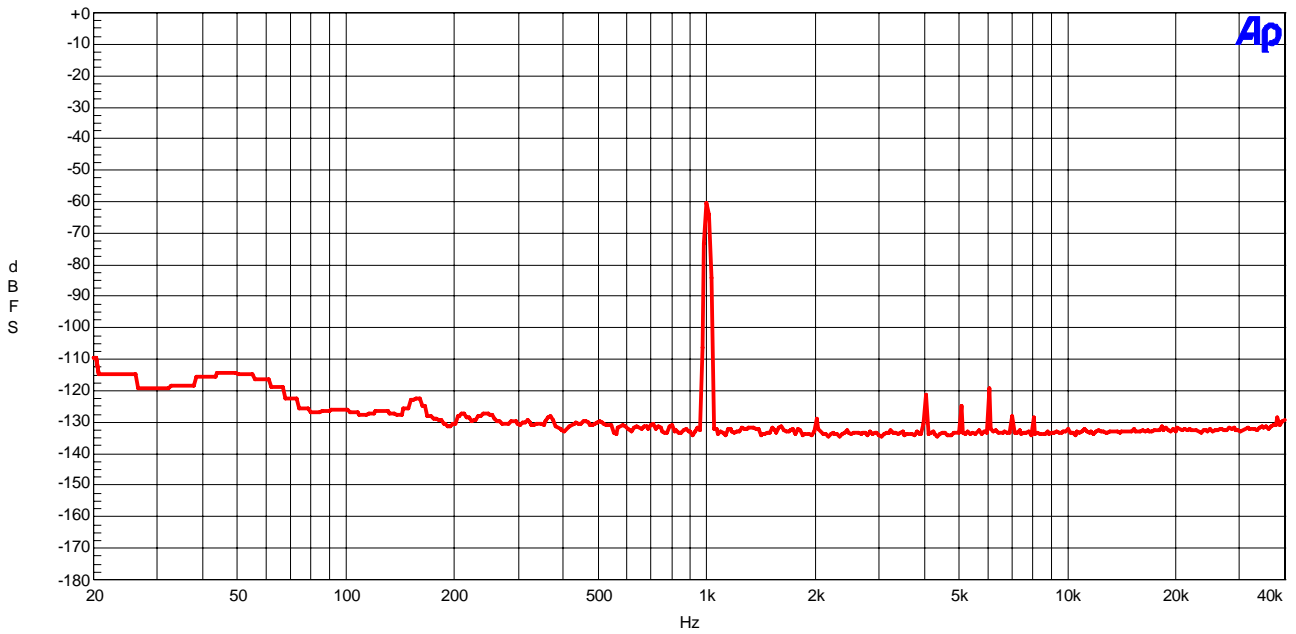
AK5357 FFT PLOt  
VA=VD=5.0V, fs=96kHz, Input=-60dB, fin=1kHz

Figure 15. FFT Plot

AKM

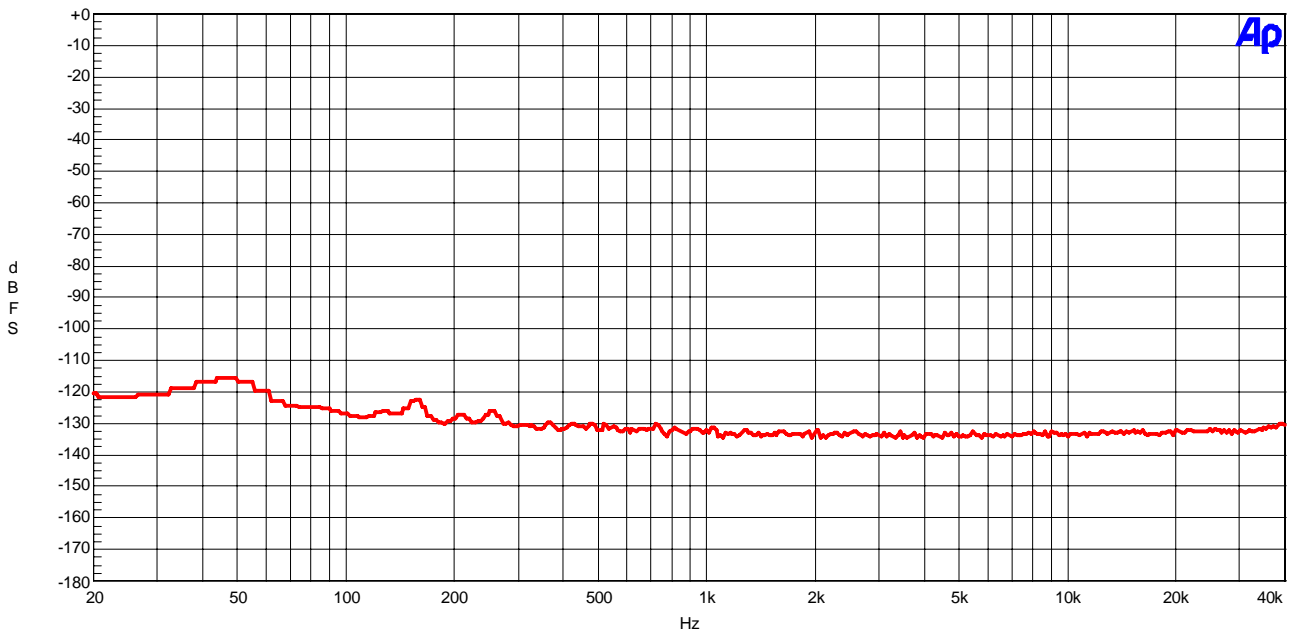
AK5357 FFT PLOt  
VA=VD=5.0V, fs=96kHz, fin=None

Figure 16. FFT Plot

<b>REVISION HISTORY</b>
-------------------------


Date (yy/mm/dd)	Manual Revision	Board Revision	Reason	Page	Contents
04/05/14	KM074600		First Edition		
05/01/14	KM074601	0	Board Name Change	1	AKD5357 Rev.B→AKD5357-B Rev.0
			Circuit Change	16-17	The information on AK5381 was removed.
05/12/05	KM074602	2	Board Rev. Change	1	There is no change in the contents of board manual.

IMPORTANT NOTICE

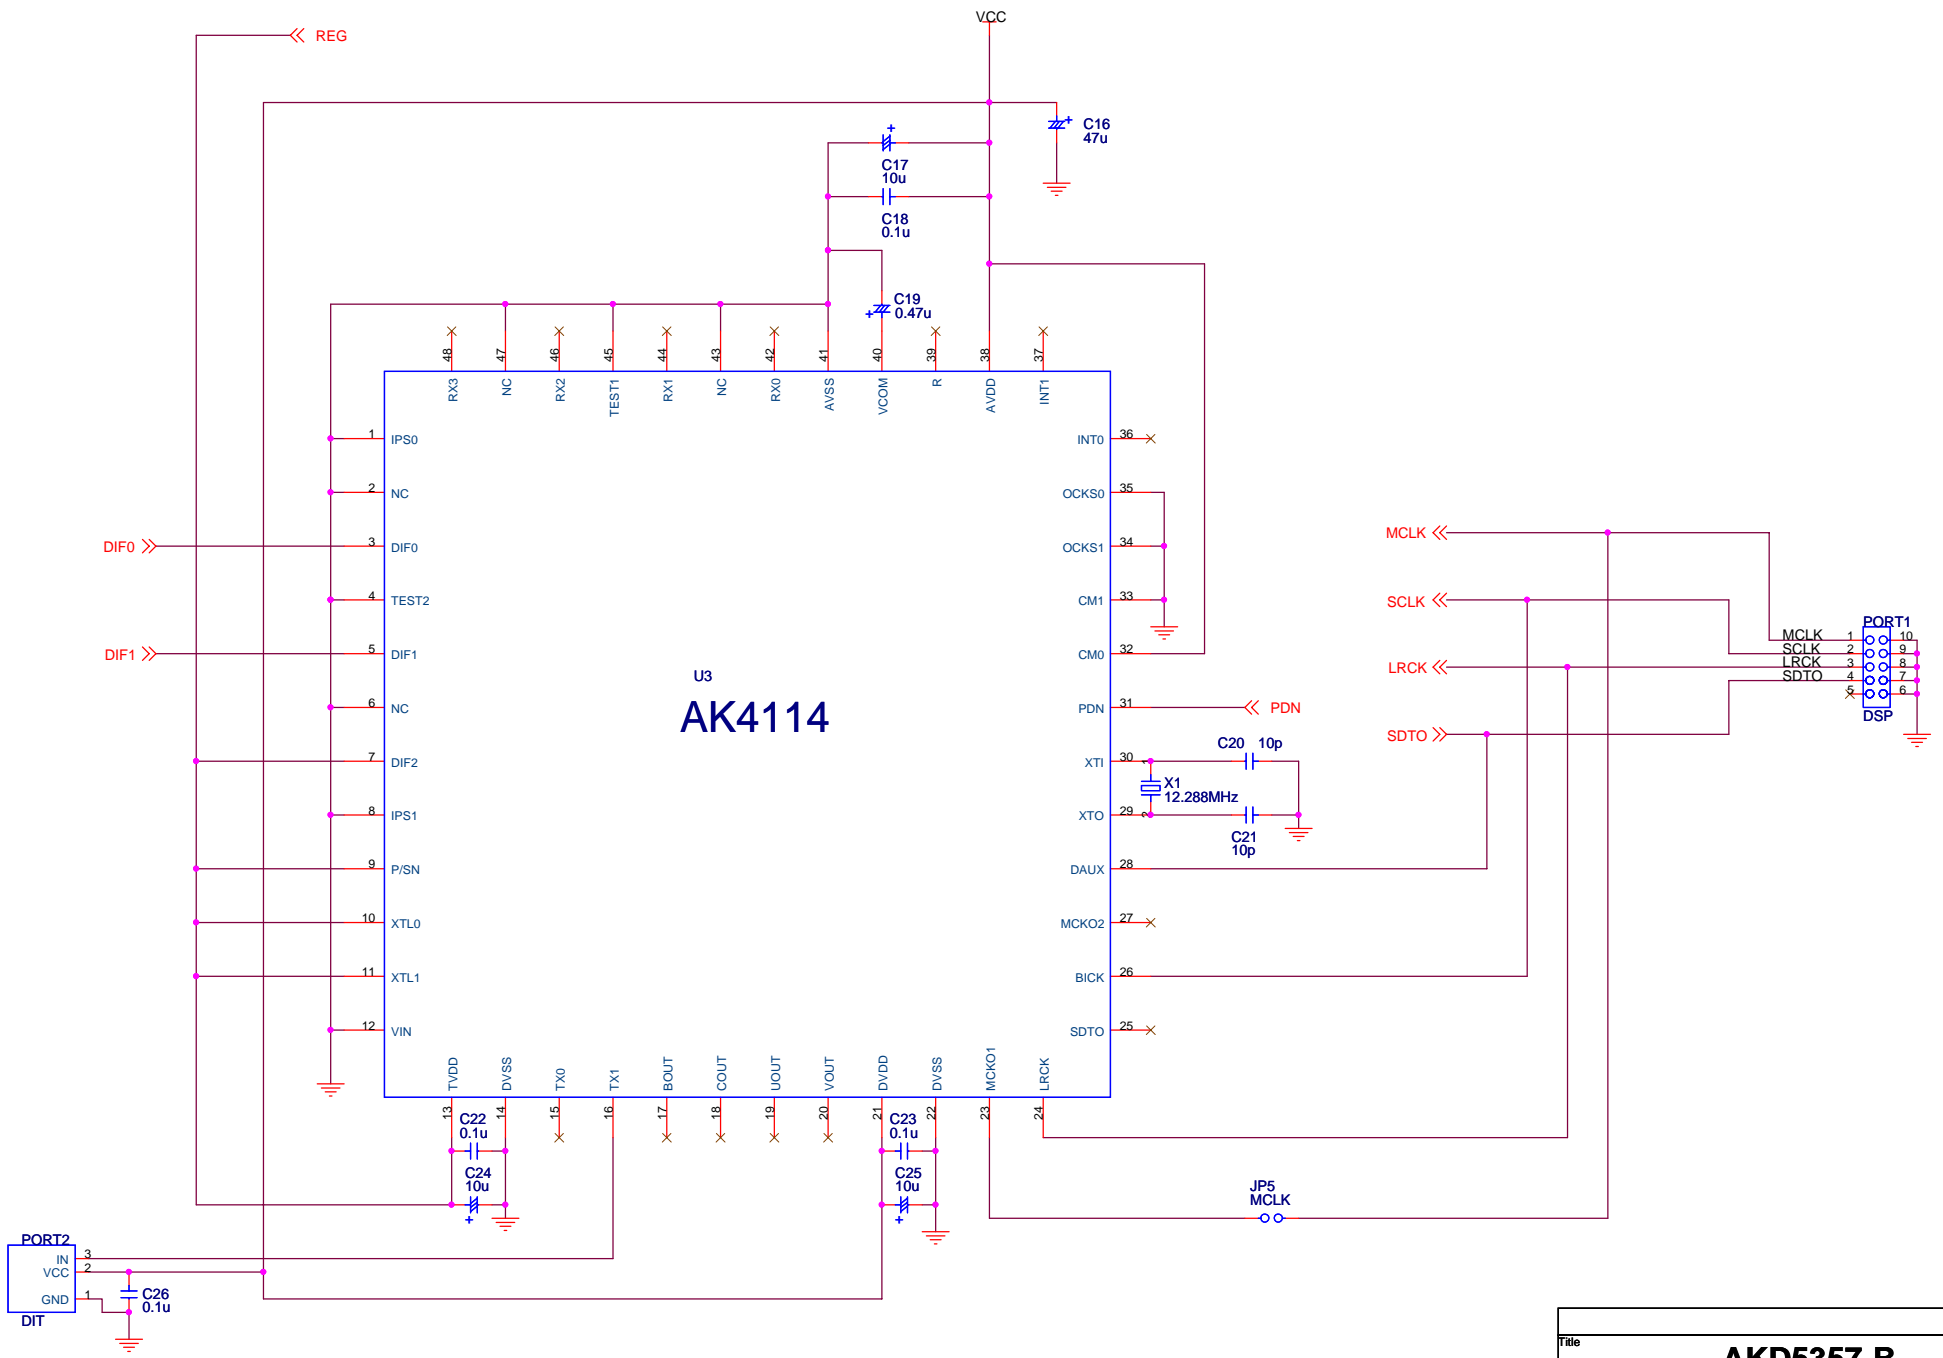
- These products and their specifications are subject to change without notice.  
When you consider any use or application of these products, please make inquiries the sales office of Asahi Kasei EMD Corporation (AKEMD) or authorized distributors as to current status of the products.
- AKEMD assumes no liability for infringement of any patent, intellectual property, or other rights in the application or use of any information contained herein.
- Any export of these products, or devices or systems containing them, may require an export license or other official approval under the law and regulations of the country of export pertaining to customs and tariffs, currency exchange, or strategic materials.
- AKEMD products are neither intended nor authorized for use as critical components<sub>Note1)</sub> in any safety, life support, or other hazard related device or system<sub>Note2)</sub>, and AKEMD assumes no responsibility for such use, except for the use approved with the express written consent by Representative Director of AKEMD. As used here:
  - Note1) A critical component is one whose failure to function or perform may reasonably be expected to result, whether directly or indirectly, in the loss of the safety or effectiveness of the device or system containing it, and which must therefore meet very high standards of performance and reliability.
  - Note2) A hazard related device or system is one designed or intended for life support or maintenance of safety or for applications in medicine, aerospace, nuclear energy, or other fields, in which its failure to function or perform may reasonably be expected to result in loss of life or in significant injury or damage to person or property.
- It is the responsibility of the buyer or distributor of AKEMD products, who distributes, disposes of, or otherwise places the product with a third party, to notify such third party in advance of the above content and conditions, and the buyer or distributor agrees to assume any and all responsibility and liability for and hold AKEMD harmless from any and all claims arising from the use of said product in the absence of such notification.









Title		<b>AKD5357-B</b>	
Size	Document Number	<b>AK4114</b>	
A3			Rev 1
Date:	Friday, October 28, 2005	Sheet	2 of 2

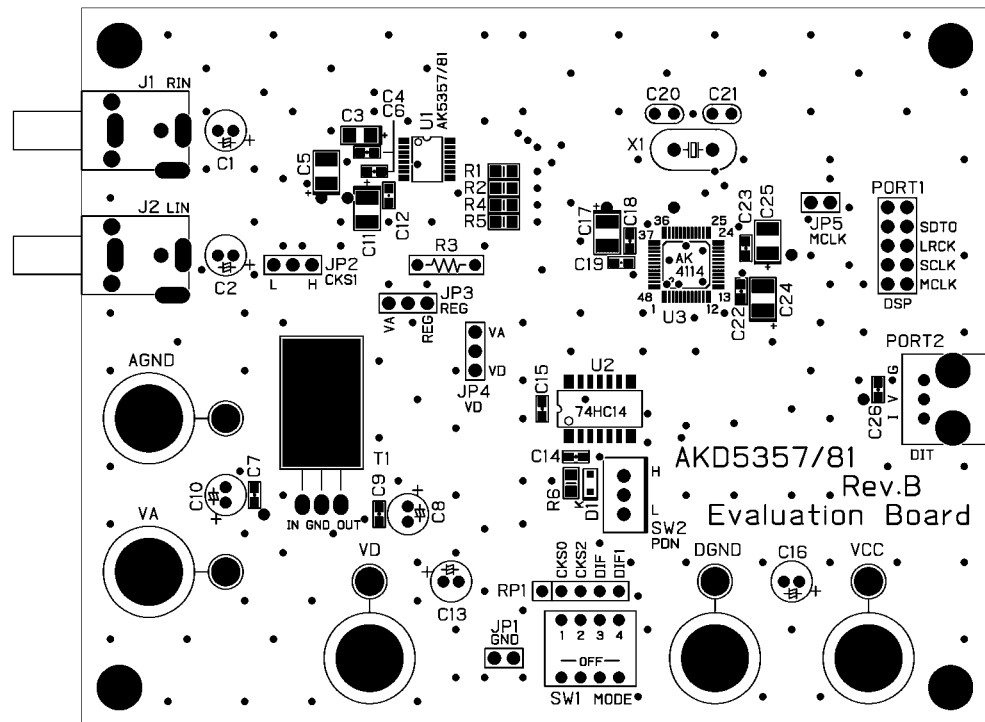

AKD5357/81 Rev.B L1 SR SILK

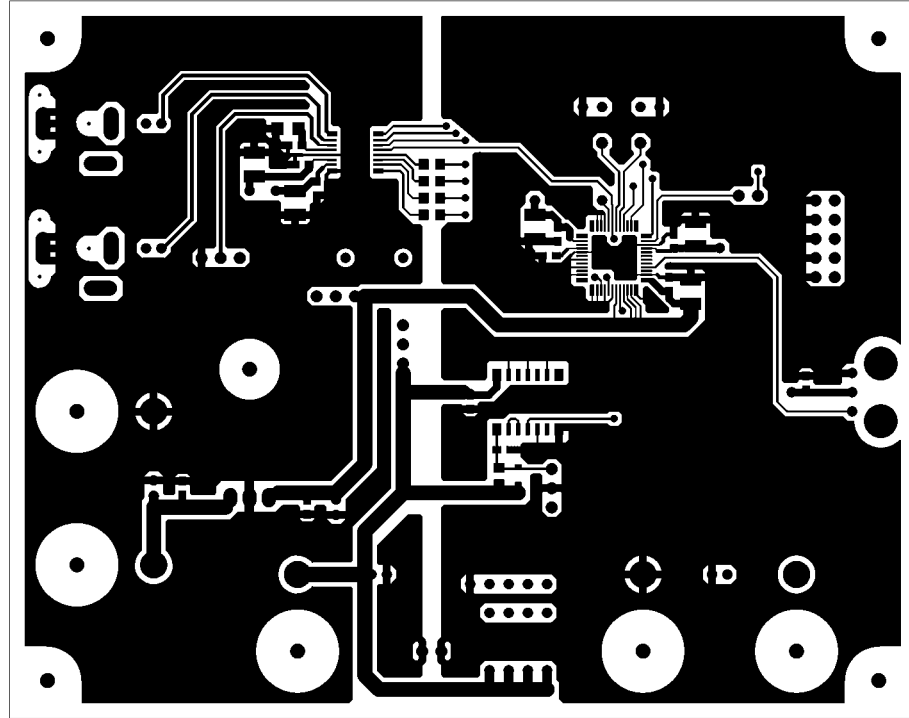

AKD5357/81 Rev.B L1

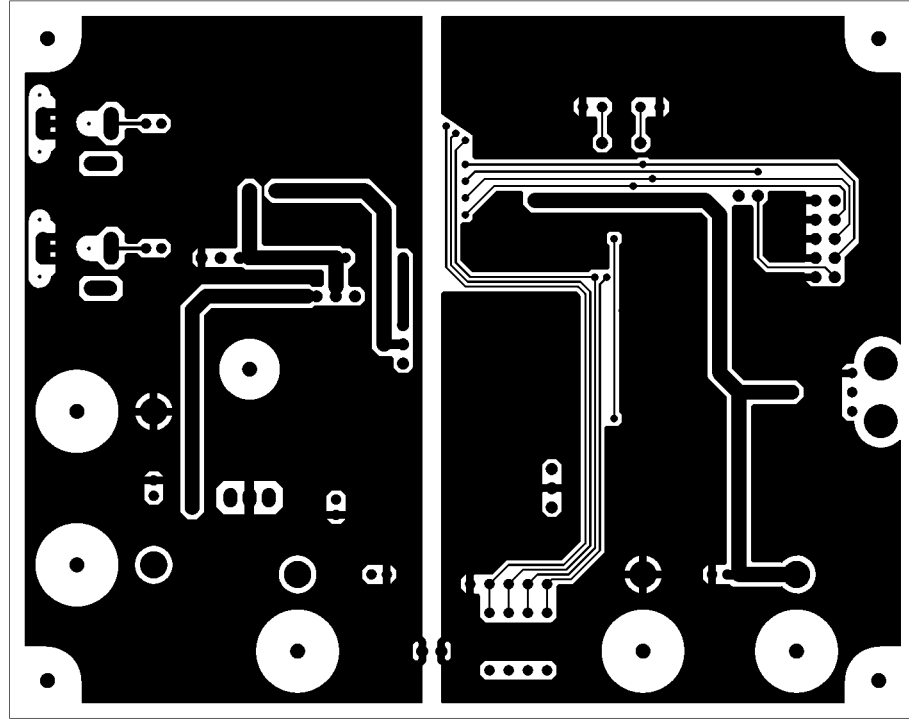

AKD2327\81 Rev.B LS SJ 8.v9R